Minolta X-370 Battery Replacement

How to replace the battery on the Minolta X-370

Written By: Nick



INTRODUCTION

Replacing the battery is a very simple task which only requires a spare coin and replacement battery.

TOOLS:


- Coin (1)

PARTS:

- Button Battery (2)
  1.55V Silver-Oxide
  SR-44: Eveready S-76, EPX-76, or equivalent
- Button Battery (2)
  1.5V Alkaline-Manganese
  LR44: Eveready A-76 or equivalent
- Button Battery (1)
  3V lithium
  CR-1/3N

Step 1 — Minolta X-370 Battery Replacement



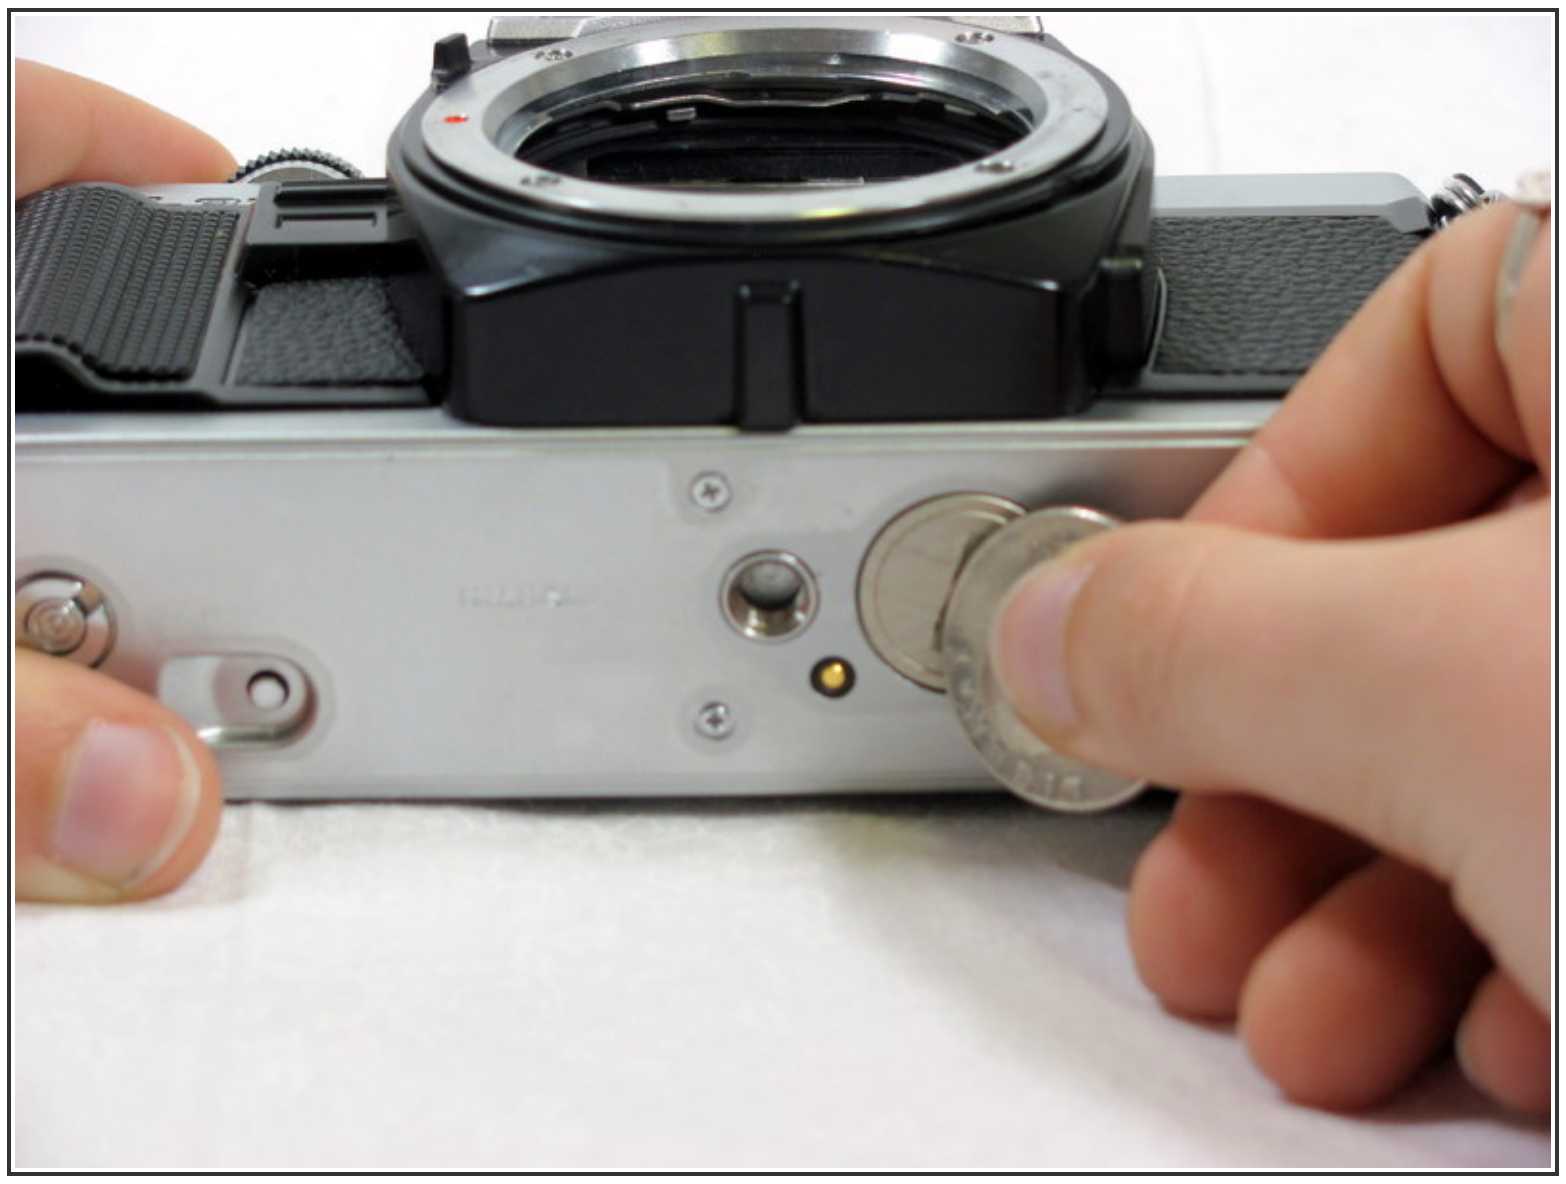

- Flip the camera so that the bottom is facing you.
- Take a spare coin and unscrew the battery cover off.

Step 2



- Remove the batteries, making sure to note their proper alignment.

To reassemble your device, follow these instructions in reverse order.